Subject: Re: meaning of 'up' and 'down' in mileageChange.dir and track.mainDir Posted by Christian Rahmig on Sun, 16 Sep 2012 18:30:54 GMT View Forum Message <> Reply to Message

Dear railML users,

>> In my examples on mileage I wrote that the values 'up' and 'down' of

>> the attributes 'mileageChange.dir' and 'track.mainDir' relate to

>> numerical interpretation (raising, falling = "to count up or

>> down"). Therefore, they differ from the typical usage in British

>> English where 'up' relates on "direction to London" and 'down'

>> relates on "direction away from London".

>

> From the next major release on this enumeration values should be renamed

- > to "raising" and "falling". See also Trac ticket #145 [1]
- >

>> therefore differ from the usage of the attribute mileageChange.dir,

>> where 'dir' of course refers to the \_absolute\_ mileage direction.

>

> From the next major release on this attribute should be renamed to

> "absDir". See also Trac ticket #144 [2]

after discussion with the other schema coordinators, we decided not to wait until the next major release and started with the implementation within railML 2.2 (see [3]):

The <mileageChange> element gets a new optional attribute "absDir", which provides the values 'raising' and 'falling'. It will replace the current attribute "dir" with the next major release and will become required then.

[1] https://trac.assembla.com/railML/ticket/145

[2] https://trac.assembla.com/railML/ticket/144

[3] https://trac.assembla.com/railML/ticket/159

Regards

Christian Rahmig railML.infrastructure coordinator